

LED Surface Mounted Panel Light

INSTALLATION INSTRUCTION

Please read the user manual carefully and follow it. This will help to prevent damage of the product, prolong its lifespan; And it will be helpful for your normal use and maintenance, to ensure that your life safety. Please keep the manual properly.

Part No.	Input Voltage	Frequency	Power	Rated Current(max)
A-SFPL-40W-NV-345K-22D	AC120-277V	50/60Hz	20W/30W/40W	0.19A/0.28A/0.37A
A-SFPL-40W-NV-345K-14D	AC120-277V	50/60Hz	20W/30W/40W	0.19A/0.28A/0.37A

◆ 345K represents Watts/CCT adjustable, 345K=3500-4000-5000K



BEFORE YOU BEGIN

Read these instructions completely and carefully

⚠ WARNING/AVERTISSEMENT

RISK OF ELECTRIC SHOCK

- Turn power off before inspection, installation or removal.
- Properly ground electrical enclosure.

RISK OF FIRE

- Follow all NEC and local codes.
- Use only UL approved wire for input/output connections. Input wire minimum size is 18 AWG, and the output wire minimum size is 24 AWG

RISQUES DE DÉCHARGES ÉLECTRIQUES

- Coupez l'alimentation avant d'inspecter, installer ou déplacer le luminaire.
- Assurez-vous de correctement mettre à la terre le boîtier d'alimentation électrique.

RISQUES D'INCENDIE

- Respectez tous les codes NEC et codes locaux.
- N'utilisez que des fils approuvés par UL ou IEC pour les entrées/sorties de connexion. Taille minimum 18 AWG (0.75mm²).

Prepare Electrical Wiring

Refer to PL Series LED Panel Specification for more lamp electronical data info.



Electrical Requirements

- The LED luminaire must be connected to the mains supply according to its ratings on the product label.



Grounding Instructions

- The grounding and bonding of the overall system shall be done in accordance to local electric code of the country where the luminaire is installed.

Save These Instructions

Use only in the manner intended by the manufacturer. If you have any questions, contact the manufacturer.

⚠ CAUTION

Do not perforate the integrity of the luminaire. Only screw into the threaded mounting bracket holes located at the four corners of the fixture.

⚠ WARNING/AVERTISSEMENT


Risk of Fire. Do not install insulation within 3 inches (76 mm) of luminaire top.
Risques d'incendie. Ne pas installer d'isolation à moins de 76 mm (3 pouces) au-dessus du luminaire.

Storage Info

Environmental Operating Temperature Range	-20°C to +60°C
Environmental Rating	Dry or damp location rated
Environmental Storage Temperature Range	-30°C to +70°C

Installation Step




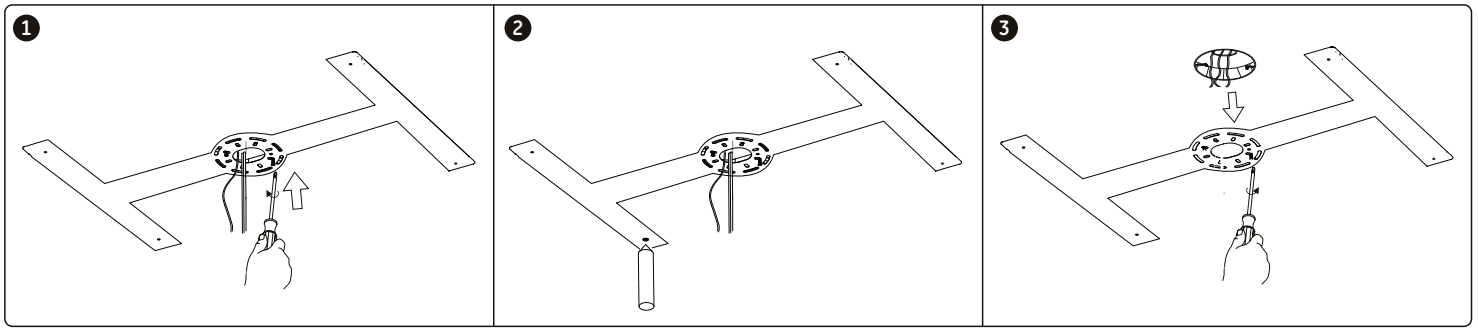

Fixing the mounting plate to junction box.

Use a pen to mark the location of the fixing hole. Through four corner holes of the mounting plate.


Remove the mounting plate

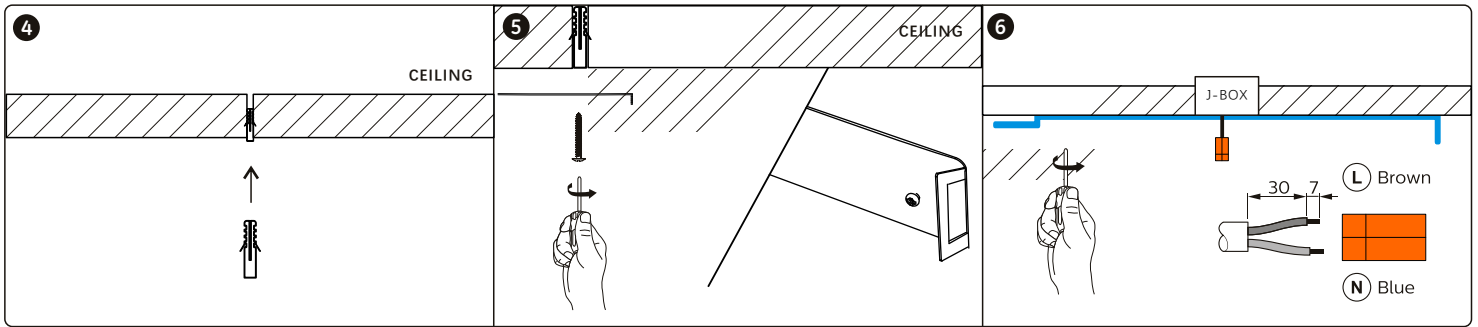

Insert the expansion screw sieve into the screw hole.

Fix the lamp to the ceiling with screws passing through the screw holes.


Tighten the screws and connect the AC terminals.

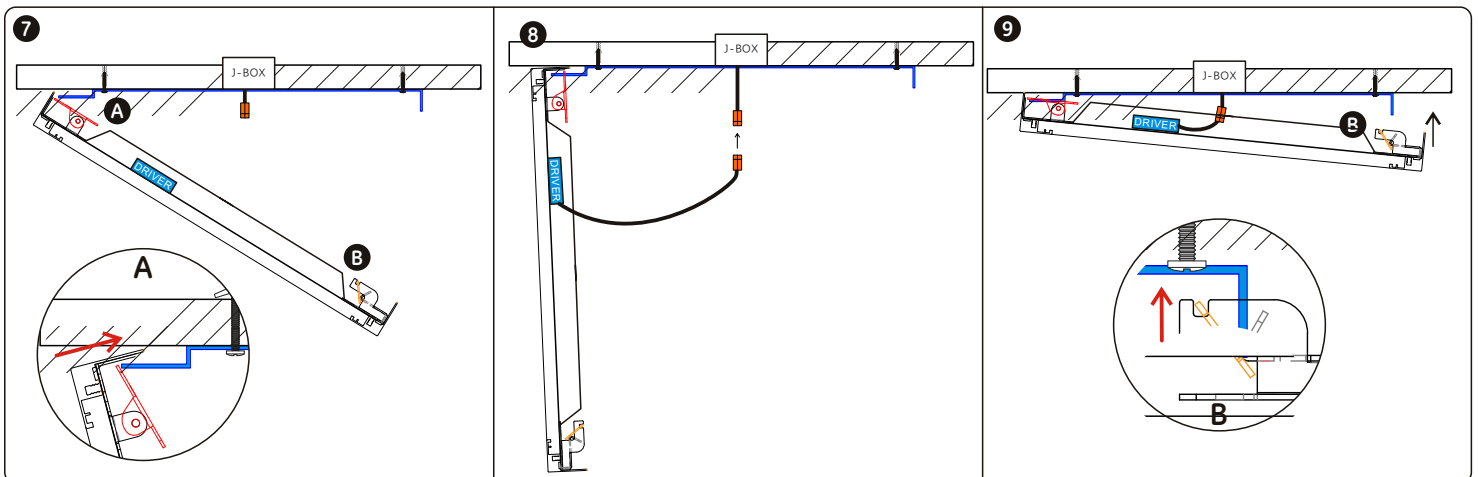

Insert part A into the ceiling plate.

Connect the AC line

Rotate the lamp fixture and attach it to part B.

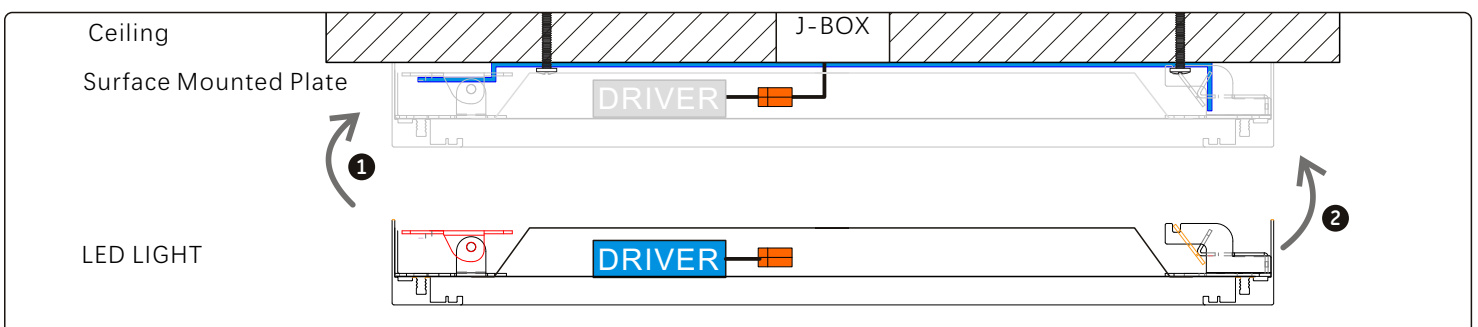

Completing.