


LED WALL SCONCE LIGHT INSTALLATION INSTRUCTION

IMPORTANT SAFEGUARDS

When using electrical equipment, basic safety precautions should always be followed including the following:

READ AND FOLLOW ALL SAFETY INSTRUCTIONS


- 1.To reduce the risk of electrical shock, turn off power supply before installation or servicing.
- 2.this luminaire must be installed in accordance with the NEC or your local electrical code. If you are not family with these codes and requirements, consult a qualified electrical.
- 3Verify the availability of necessary tools and incidental material.

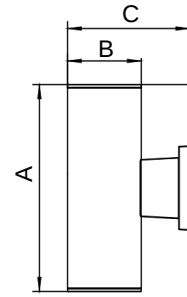

Model	Input Voltage	Frequency	Power	CCT	Rated Current	A	B	C	Optional
A-WSS4IN-25/20/15W-NV-345K-BK	AC 110-277V	50/60Hz	25W/20W/15W	27K/30K/35K/40K/50K	0.23A/0.18A/0.14A	293mm(11.54")	100mm(3.94")	169mm(6.65")	/
A-WSS4IN-25/20/15W-NV-345KP-BK	AC 110-277V	50/60Hz	25W/20W/15W	27K/30K/35K/40K/50K	0.23A/0.18A/0.14A	293mm(11.54")	100mm(3.94")	169mm(6.65")	Photocontrol
A-WSS4IN-25/20/15W-NV-345K-WH	AC 110-277V	50/60Hz	25W/20W/15W	27K/30K/35K/40K/50K	0.23A/0.18A/0.14A	293mm(11.54")	100mm(3.94")	169mm(6.65")	/
A-WSS4IN-25/20/15W-NV-345KP-WH	AC 110-277V	50/60Hz	25W/20W/15W	27K/30K/35K/40K/50K	0.23A/0.18A/0.14A	293mm(11.54")	100mm(3.94")	169mm(6.65")	Photocontrol

TO INSTALL

LUMINAIRE INSTALLATION

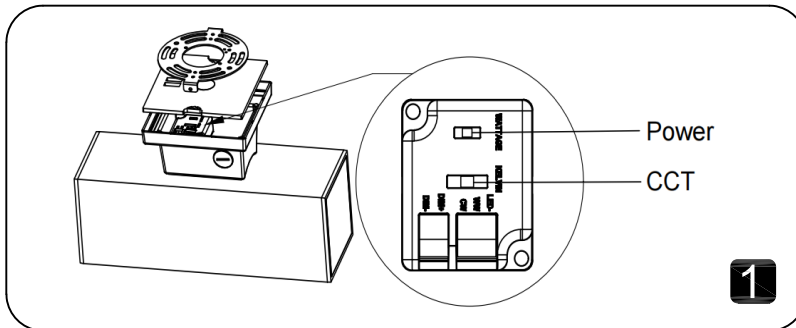


STEP 1(Figure 1):

- 1.Dismount two screws on round mouting plate and two screws on back cover of the lamp.
- 3.Adjust color temperature and power by sliding switch.

STEP 2 (Figure 2):

- 1.Attach the round mouting plate to junction box.


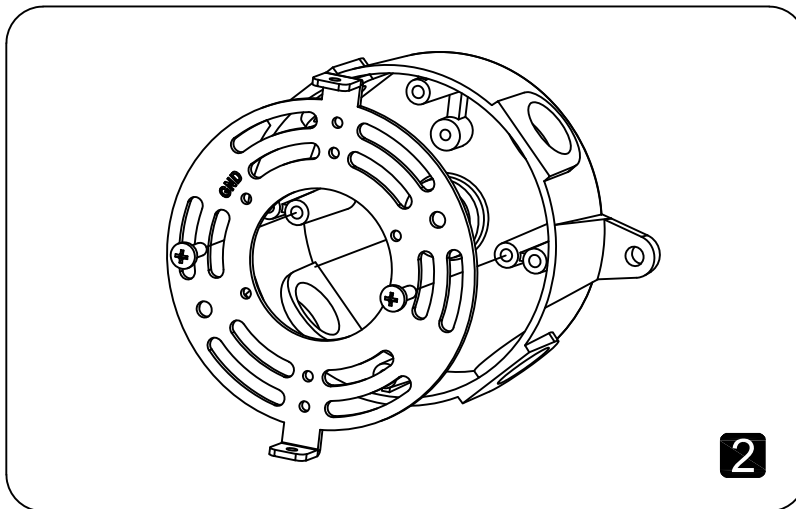


STEP 3(Figure 3):

follow the wiring directions as shown in figure below.

STEP 4(Figure 4):

Install the back cover back to the lamp, then fix the lamp to the round mounting plate.

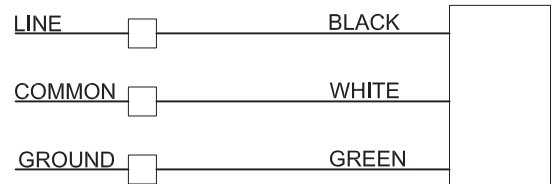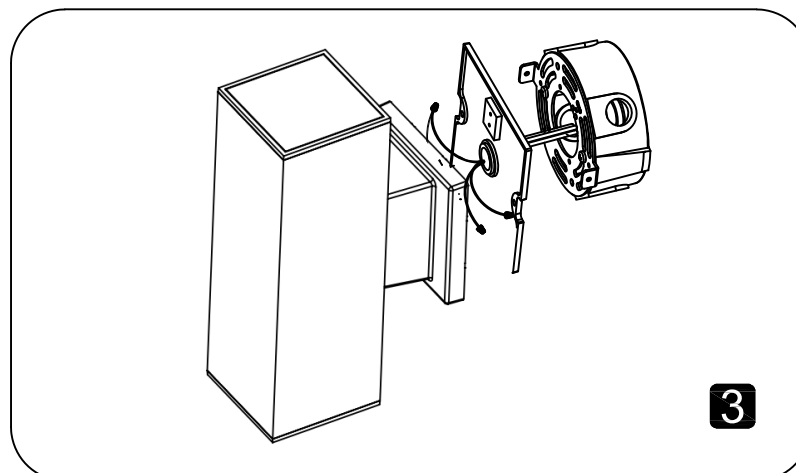

Trouble shooting: If this fixture fails to operate properly, check to make sure: The fixture is wired correctly. The fixture is grounded correctly. The line voltage at the fixture is correct. If all these variables have been checked and the fixture still does not operate as specified, contact your local distributor